Connect reTerminal device to your Azure IoT services

Table of Contents

- Introduction
- Supported Device Attestation Methods
- Prerequisites
- Prepare the Device
- Run the program
- Additional Links

Introduction



reTerminal is powered by a Raspberry Pi Compute Module 4 (CM4) which is a Quad-Core Cortex-A72 CPU running at 1.5GHz and a 5-inch IPS capacitive multi-touch screen with a resolution of 720 x 1280. It has sufficient amount of RAM (4GB) to perform multitasking and also has sufficient amount of eMMC storage (32GB) to install an operating system, enabling fast boot up times and smooth overall experience. It has wireless connectivity with dual-band 2.4GHz/5GHz Wi-Fi and Bluetooth 5.0 BLE.

reterminal-aziot-example is an IoT Plug and Play compatible program that allows reTerminal to communicate with Azure IoT.

It has the following features:

- Telemetry
 - Periodically measure the acceleration of the reTerminal and send it to Azure IoT.
 - Notify Azure IoT of button clicks on the front of the reTerminal.
- Property
 - Instructions from Azure IoT will turn on the LED on the front of the reTerminal.
- Command
 - The reTerminal buzzes with instructions from Azure IoT.

Supported Device Attestation Methods

The following table summarizes supported device attestation/authentication methods :

Service	Enrollment	Authentication	Support status
Azure IoT Hub	-	Symmetric Key	Supported
Azure IoT Hub	-	X.509 Self-Signed	Not Supported
Azure IoT Hub	-	X.509 CA-Signed	Not Supported
Azure IoT Hub DPS	Group	Symmetric Key	Supported
Azure IoT Hub DPS	Group	CA Certificate	Not Supported
Azure IoT Hub DPS	Group	Intermediate Certificate	Not Supported
Azure IoT Hub DPS	Individual	Symmetric Key	Supported
Azure IoT Hub DPS	Individual	X.509	Not Supported
Azure IoT Hub DPS	Individual	ТРМ	Not Supported
Azure IoT Central	Group	Symmetric Key	Supported
Azure IoT Central	Group	CA Certificate	Not Supported

Prerequisites

You should have the following items ready before beginning the process:

For Azure IoT Central

• Azure IoT Central application

For Azure IoT Hub

• Azure IoT Hub instance

Prepare the Device

1. Download the program

Clone or download ZIP from the GitHub repository reterminal-aziot-example.

```
git clone https://github.com/SeeedJP/reterminal-aziot-example
cd reterminal-aziot-example
```

2. Install the required Python package

Install the Python packages listed in the requirements.txt.

sudo pip3 install -r requirements.txt

Run the program

1. Set environment variables

Set the Azure IoT information to environment variables.

For Azure IoT Central

New the device, and then set the device connection information to environment variables.

```
export IOTHUB_DEVICE_SECURITY_TYPE="DPS"
export IOTHUB_DEVICE_DPS_ID_SCOPE="<ID scope of device connection>"
export IOTHUB_DEVICE_DPS_DEVICE_ID="<Device ID (as you wish)>"
export IOTHUB_DEVICE_DPS_DEVICE_KEY="<Primary key of SAS-IoT-Devices>"
export IOTHUB_DEVICE_DPS_ENDPOINT="global.azure-devices-provisioning.net"
```

For Azure IoT Hub

New the device, and then set the primary connection string to an environment variable.

```
export IOTHUB_DEVICE_SECURITY_TYPE="connectionString"
export IOTHUB_DEVICE_CONNECTION_STRING="<Primary Connection String>"
```

2. Run the program

Run reterminal_aziot_example.py.

sudo -E python3 src/reterminal_aziot_example.py

Additional Links

• Source code (on GitHub)

Please refer to the below link for additional information for Plug and Play

- Manage cloud device messaging with Azure-IoT-Explorer
- Import the Plug and Play model
- Configure to connect to IoT Hub
- How to use IoT Explorer to interact with the device